

LowandMean.com

928.680.6660

YAMAHA RAIDER LOW RIDER SEAT



Part # LM-04-420R

INSTRUCTIONS

LM-04-420R includes:	WARNING: Do not install with the engine warm. This is an install at your own risk. If you feel you are not capable of installing this part successfully then we highly suggest you take this item to a professional shop. Always check the fit before sending this product off to be covered.
1 – Dual lock Velcro	

Suggestions for install:

- 1) Remove the stock seat by turning your key in the left side cover.
See Figure 1.0
- 2) Lift up on the front of the stock seat to expose the battery and electronics. See Figure 1.1
- 3) Remove the stock seat bracket (2 bolts) on the rear fender with a 10mm socket or wrench. See Figure 1.2
- 4) To install the Low Rider seat, first hook the Low Rider seat behind the tank and line up the "L" bracket with the latch on the bike. Position the hole in the bottom, back of the seat over the small pin sticking out of the rear fender.
Tip: You will need to move your fuel controller if it is currently right under the seat.
- 5) Pull up gently on back of the Low Rider seat and peel off the backing to the Velcro. Now stick the seat back down into place and apply some pressure to the area with the velcro for a tight bond.
See Figure 1.3

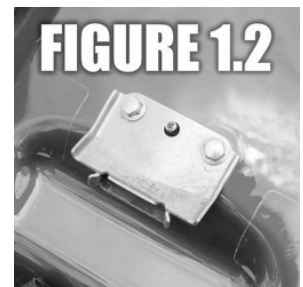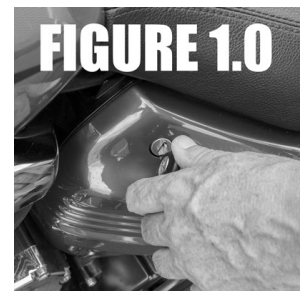

Now send us some pictures! We post all our customer's install pictures on our Facebook page.

Facebook.com/Lowandmeancom

Please contact our Tech support if you have any issues or questions about install

Sales@LowandMean.com or 928-680-6660

© 2006-2017 Low and Mean L.L.C.™, All rights reserved.