

HONDA FURY IGNITION COVER

LowandMean.com

Part # LM-02F-1010


928.680.6660

INSTRUCTIONS

LM-02F-1010 includes:		WARNING: COMPLETELY READ INSTRUCTIONS BEFORE INSTALLING! We highly recommend using a motorcycle jack/lift for this install to stabilize the motorcycle. Do not install this item when the motor is warm. This is an install at your own risk. If you are not able to install successfully then we highly suggest you take this item to a professional shop.
1	Button head bolt	
1	SS washer	
1	Double sided tape	

Suggestions for install:

- 1) Remove the three plastic clips holding on the chrome cover. To remove these plastic clips, just push in the center and carefully pull them out. You can use a flat screw driver or your ignition key. See Fig.1 Then remove the chrome cover.
- 2) Remove the three 5mm Allen bolts holding on the black plastic cover. See Fig.2
- 3) Remove the black plastic ignition cover.
- 4) Remove the rear chrome cylinder cover (it has three attachment points) by pulling it back with two hands, it should just pop off.
- 5) Before installing the new ignition cover, put a small piece of double sided tape under the frame for protection. Peel off the both sides after it's stuck to the inside of the frame. See Fig.5 This is to protect the ignition cover from hitting the frame.
- 6) Next, add small amount of silicone on the tab area that will sit behind the LM air intake adapter. See Fig.3
- 7) Carefully slide the ignition cover in place getting the small tab to fit behind the intake adapter, then align the bottom bolt hole.
- 8) Use the supplied bolt and washer with Loctite® to tighten down the ignition cover. The ignition cover and LM air intake adapter should fit together nicely.
- 9) Re-install the rear chrome cylinder cover. A small part of the new ignition cover should sit behind the rear chrome cylinder cover. See Fig.4 Please double check your work before and after

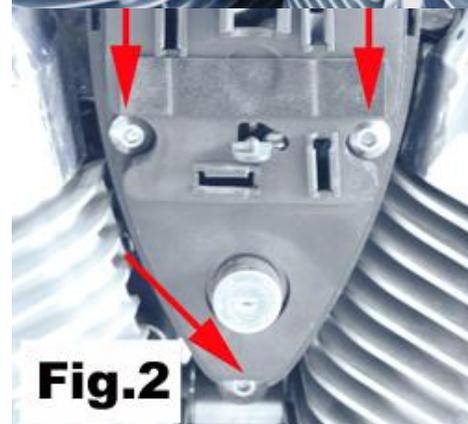

Please send us a picture of your **Nice bike™**.

Please contact our Tech support if you have any issues or questions about install

Techsupport@LowandMean.com or 928.680.6660

© 2006-2014 Low and Mean L.L.C.™, All rights reserved.