

LowandMean.com

928.680.6660

HONDA FURY REAR FENDER COVERS

Part# LM-02F-216

INSTRUCTIONS

| | |
|-----------------------|------------------------|
| LM- 02F-216 includes: | |
| 4 | Cap bolts |
| 1 | Polished flathead bolt |
| 5 | 6mm nuts |
| 5 | 6mm washers |
| 1 | rubber washer |
| 1 | LED license light |

WARNING: We highly recommend installing this product before painting. Please do not install this product with the motor warm or the battery connected. This is an install at your own risk. If you are not capable to install successfully then we highly suggest you take this item to a professional shop.

Suggestions for install:

1) To install this product you of course must have the LM Rear fender with the 3 slots and 5 holes cut on tail of the fender.

(See figure 1.1)

2) Attaching the license plate to the tail of the fender, you'll use the supplied 4 cap bolts, washers and nuts. The license plate might need slight trimming at the bottom edges. (See figure 1.2) Make sure to use Locite on final installation.

3) Attach the LED light to the inside of the License Cover. (See figure 1.3)

4) Install the LED Brake light before installing the License cover. (See figure 1.2))

5) Now install the License Cover to the rear fender. Insert the License plate light wires through the center slot. (See figure 1.3) Guiding the three tabs on the cover into the rear of the fender. Position the cover so the bottom hole lines up so you can insert the polished bolt flat head supplied bolt, washer and nut. Use Locite.

6) Use silicone on the inside of the fender where the License Cover tabs come through. (See Figure 1.5)

7) Double check all your work, make sure it fits good and tight to the fender.

8) Protect your wires and Super glue them alongside the inside of the fender.

9) You can hard wire the new lights in, but we suggest keeping the stock electrical plug.

Figure 1.1



Figure 1.2




Figure 1.3



Figure 1.4



Figure 1.5

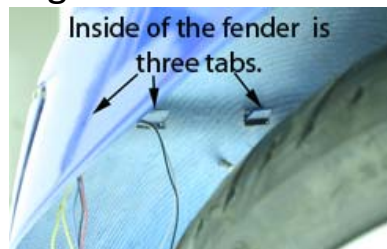

Please send us a picture of your *Nice bike*™.

Please contact our Tech support if you have any issues or questions about install

Techsupport@LowandMean.com or 928.680.6660

© 2006-2015 Low and Mean L.L.C.™, All rights reserved.