



Scan the QR code to the left to be directed to the **How To Video** by Low and Mean

←
Let us know how your installation went. Send an email to techsupport@lowandmean.com



Parts Included:

Fat Fork Tubes (2)
Gators (2) Optional

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

Make sure your motorcycle is stable before starting.

- 1 Remove the brake caliper. Fig. 5
- 2 Remove the front wheel, remove axle bolt and loosen both pinch bolts. Fig 1 & 2
- 3 Loosen three bolts on the triple tree holding the forks in place Fig. 3
- 4 Loosen bolts holding on the turn signals.
- 5 Slide forks out.
- 6 Position fat forks between triple trees. Fig. 4 **
- 7 Slide fork up thru triple tree and fat fork tubes.



8 Tighten bolts on triple trees and on turn signal. Fig. 3

9 Re install front wheel along with brake calipers. Fig. 5

NOTE: If you ordered the optional gators you would slide them on the forks before you slide the forks up and thru the triple tree and fat fork tubes.

Part Number NOTE: These instructions are for three different part Numbers.

P/N ending in 730 series is for the stock triple tree. P/N ending is 740 Series is for those using the 5 degree triple tree.

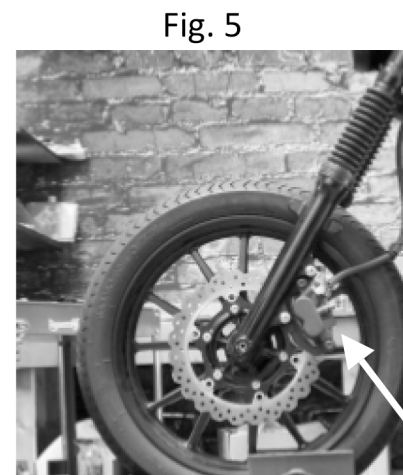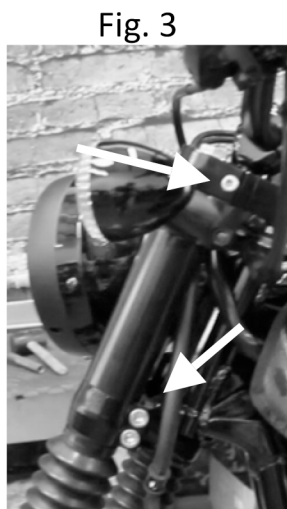

**For the Fork tubes with LED signals, there is a space between the fork tube and upper tree mount to fit the LED signal.