




QR Code takes you directly to the LM Install Video.

Let us know how your installation went. Send an email to techsupport@lowandmean.com

By doing this your name will be entered into our monthly drawing for a Low and Mean T-shirt.

Supplied with Kit: Fork Caps

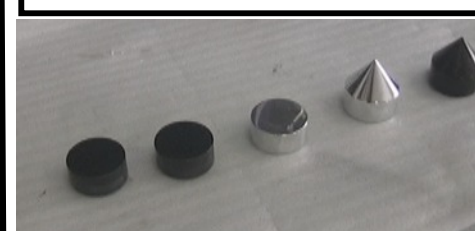

Picture is for reference only your fork caps appearance will depend on which style you ordered.

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

- 1 Place Motorcycle on jack stand. Fig. 1
- 2 Loosen the top and bottom triple tree pinch bolts. Top are a 6mm allen and the bottom are an 8 mm bolt. Do not remove just loosen so the fork can slide down. Lift bike until front wheel is off the ground. Fig 2.
- 3 Slide forks down no more then ½ inch. Measure to make sure both forks are equal distant from the top. Fig 3.
- 4 Insert LM fork caps. Fig 4.
- 5 Tighten triple tree pinch bolts both top and bottom.

Fig. 1



Fig. 2

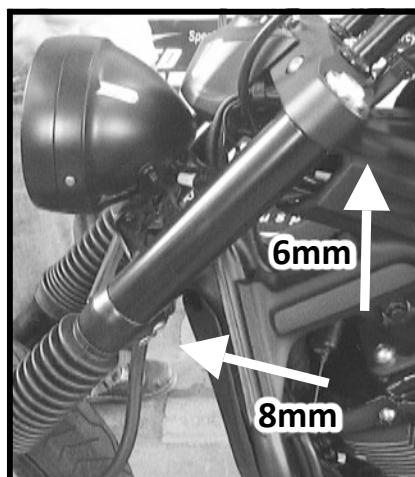


Fig. 3



Fig. 4

